

Programming Remote Control






You can control your Television and your cable box with the Remote Control provided during the Digital install. Follow these steps to program the remote for TV usage.

Note: The Remote is already factory programmed to control the Cable Box.

- ω Ensure the Television you wish to program the remote control with is turn ON.
- ω Make sure any other equipment is turned OFF or on STANDBY

(To turn the Cable box to Standby simply press the  button on the remote)

The Screen will be blank when the Cable box is turned OFF and the TV is turned ON.

1. Press the  button so that it blinks.
2. Then press and hold the  button until the  button blinks twice.
3. Use the “Manufacturer’s Codes” on page ____ to locate the brand name of your TV and enter the first 4-digit code for that brand. If the code is correct, the  button blinks twice. Aim the remote control at the TV and press the  button. (If the code was correct the TV will turn off).
4. If the TV doesn’t turn off. Repeat steps 1 – 3 using the next in list.

For future reference, please use the space provided to write down the working code for your TV(s).

<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

Setup Codes for TVs

A-Mark	0003
Abex	0032
Admiral	0093, 0463
Advent	0761, 0783, 0815, 0817, 0842, 1933
Adventura	0046
Aiko	0092
Aiwa	0701
Akai	0030, 0060, 0098, 0672, 0702, 0812, 1903
Alaron	0179, 0183, 0216
Albatron	0700, 0843
Ambassador	0177
America Action	0180
Ampro	0751
Anam	0004, 0009, 0068, 0180
Anam National	0055, 0161
AOC	0003, 0019, 0030, 0052, 0137, 0185
Apex Digital	0156, 0748, 0765, 0767, 0879, 1943
Archer	0003
Audiovox	0003, 0092, 0180, 0451, 0623, 0802, 0875, 1284, 1937, 1951, 1952
Aventura	0171
Axon	1937
Belcor	0019
Bell & Howell	0016, 0154
BenQ	1032, 1315
Boxlight	0893
Bradford	0180
Brockwood	0019
Broksonic	0003, 0180, 0236, 0463, 1935, 1938
Cadia	1283
Candle	0030, 0046, 0056, 0186
Carnivale	0030
Carver	0054, 0170
CCE	0217, 0329
Celebrity	0000

Celera	0765
Champion	1362
Changhong	0765
Cinego	1986
Citizen	0030, 0039, 0046, 0056, 0060, 0092, 0186, 0280
Clairtone	0185
Clarion	0180
Commercial Solutions	0047, 1447
Concerto	0056
Contec	0157, 0158, 0180, 0185
Craig	0161, 0180
Crosley	0054
Crown	0039, 0180
Curtis Mathes	0016, 0030, 0039, 0047, 0054, 0056, 0060, 0093, 0145, 0154, 0166, 0451, 0466, 0702, 0747, 1147, 1347
CXC	0180
Daewoo	0019, 0039, 0066, 0067, 0091, 0092, 0451, 0623, 0661, 0672, 1661
Daytron	0019
Dell	1080, 1178, 1264, 1403, 1454
Denon	0145, 0511
Denstar	0628
Diamond Vision	1996, 1997
DMTech	1338
Dream Vision	1297
Dumont	0017, 0019
Durabrand	0003, 0171, 0178, 0180, 0463, 1034
Dwin	0093, 0720, 0747, 0774
Dynatech	0049
Electroband	0000, 0185
Electrograph	1755
Electrohome	0381, 0389, 0409
Emerson	0019, 0038, 0039, 0154, 0158, 0171, 0177, 0178, 0179, 0180, 0181, 0182, 0183, 0185, 0236, 0270, 0280, 0282, 0451, 0463, 0623, 1944, 1963
Envision	0030, 0813, 1365
Epson	0833, 0840, 1290
ESA	0171, 0812

Fisher	0154, 0159
Fujitsu	0179, 0186, 0683, 0809, 0853
Funai	0171, 0179, 0180
Futuretech	0180
Gateway	1755, 1756
GE	0021, 0027, 0029, 0047, 0051, 0055, 0135, 0138, 0174, 0178, 0251, 0279, 0282, 0451, 0747, 1347, 1447
Gibraltar	0017, 0019, 0030
Go Video	0886
GoldStar	0001, 0002, 0019, 0030, 0032, 0106, 0178, 0409
Goodmans	0360
Gradiente	0392
Grundig	0683
Grunpy	0179, 0180
Haier	0768, 1034
Hallmark	0178
Hannspree	1348, 1351, 1352
Hantarex	1338
Harley Davidson	0043, 0179
Harman/Kardon	0054, 0078
Harvard	0068, 0180
Havermy	0093
Helios	0865
Hello Kitty	0451
Hewlett Packard	1088, 1089, 1101, 1494, 1502
Hisense	0748
Hitachi	0016, 0032, 0038, 0056, 0095, 0097, 0145, 0151, 0173, 0227, 0279, 0409, 0413, 1145, 1960
HP	1088, 1089, 1101, 1494, 1502
Hyundai	0849
iLo	1286, 1990
Infinity	0054
Initial	1990
Inteq	0017
Janeil	0046
JBL	0054
JCB	0000
Jensen	0050, 0761, 0815, 0817, 1299, 1933

JVC	0036, 0053, 0069, 0160, 0169, 0182, 0731, 1253, 1352
Kamp	0216
Kawasho	0158, 0216, 0308
Kaypani	0052
KEC	0180
Kenwood	0019, 0030
KLH	0765, 0767, 1962
Kloss	0024, 0046, 0078
KMC	0106
Konka	0628, 0632, 0638, 0703, 0707
KTV	0030, 0039, 0180, 0183, 0185, 0217, 0280
LG	0178, 0442, 0700, 0856, 1178, 1265, 1325, 1993
Loewe	0136
Logik	0016
Luxman	0056
LXI	0047, 0054, 0148, 0154, 0156, 0178, 0747
Magnavox	0020, 0024, 0028, 0030, 0036, 0054, 0096, 0179, 0186, 0187, 0230, 0386, 0706, 0802, 1254, 1454, 1944, 1963
Majestic	0015, 0016
Marantz	0030, 0054, 0444, 0704, 0854, 0855, 1154, 1454
Matsushita	0250, 0650
Maxent	1755
Megapower	0700
Megatron	0003, 0145, 0178
MEI	0185
Memorex	0016, 0106, 0150, 0154, 0178, 0179, 0463
MGA	0019, 0030, 0150, 0155, 0178
Midland	0017, 0032, 0039, 0047, 0051, 0135, 0747
Mintek	1990
Minutz	0021
Mitsubishi	0014, 0019, 0093, 0098, 0150, 0155, 0178, 0331, 0358, 0836, 0868, 1250, 1550
Monivision	0700, 0843
Motorola	0055, 0093

MTC	0019, 0030, 0049, 0056, 0060, 0091, 0185, 0216
Multitech	0049, 0180, 0217
NAD	0156, 0178, 0866
NEC	0019, 0030, 0036, 0056, 0170, 0434, 0497, 0882, 1704
NetTV	1755
Nikko	0030, 0092, 0178, 0317
Noblex	0430
Norcent	0748, 0824, 1365
Norwood Micro	1286, 1296, 1303
Noshi	0018
NTC	0092
Olevia	1144, 1240, 1331
Onwa	0180
Optimus	0154, 0166, 0250, 0650
Optoma	0887, 1348
Optonica	0093, 0165
Orion	0179, 0236, 0463, 1463
Panasonic	0051, 0055, 0162, 0226, 0250, 0338, 0375, 0650, 1410, 1941, 1946, 1947
Penney	0002, 0003, 0018, 0019, 0021, 0027, 0030, 0032, 0039, 0047, 0051, 0060, 0110, 0135, 0138, 0149, 0156, 0178, 0309, 0747, 1347
Philco	0019, 0020, 0028, 0030, 0054, 0096, 0302
Philips	0054, 0690, 1154, 1454
Pilot	0019, 0030, 0039
Pioneer	0038, 0166, 0172, 0679, 0866, 1260
Polaroid	0765, 0865, 1276, 1314, 1316, 1326, 1327, 1328, 1991, 1992
Portland	0019, 0039, 0092
Prima	0761, 0783, 0815, 0817, 1933
Princeton	0700, 0717
Prism	0051
Proscan	0047, 0466, 0747, 1347, 1447
Proton	0003, 0031, 0052, 0178, 0466
Protron	1320, 1323
Proview	1498
Pulsar	0017, 0019
Quasar	0051, 0055, 0165, 0219, 0250, 0650

RadioShack	0019, 0030, 0032, 0039, 0047, 0056, 0154, 0165, 0178, 0180, 0409, 0747
RCA	0018, 0019, 0029, 0038, 0047, 0090, 0135, 0174, 0278, 0679, 0747, 1047, 1147, 1247, 1347, 1447, 1547, 1948, 1953, 1958
Realistic	0019, 0030, 0032, 0039, 0056, 0154, 0165, 0178, 0180
Rhapsody	0183, 0185, 0216
Runco	0017, 0030, 0251, 0497, 0603
Sampo	0030, 0032, 0039, 0052, 0100, 0110, 1755
Samsung	0019, 0030, 0032, 0056, 0060, 0178, 0217, 0329, 0408, 0427, 0587, 0702, 0766, 0812, 0814, 1060, 1312, 1395, 1903
Samsux	0039
Sansui	0463, 1935
Sanyo	0088, 0107, 0146, 0154, 0159, 0232, 0484, 0799, 0893, 1142
Sceptre	1360
Scimitsu	0019
Scotch	0178
Scott	0019, 0178, 0179, 0180, 0236, 0309
Sears	0015, 0047, 0054, 0056, 0146, 0148, 0149, 0154, 0156, 0159, 0168, 0171, 0178, 0179, 0281, 0747
Seleco	1297, 1351
Sharp	0039, 0093, 0153, 0157, 0165, 0220, 0281, 0386, 0398, 0491, 0688, 0689, 0818, 0851
Sheng Chia	0093
Shogun	0019
Signature	0016
SIM2 Multimedia	1297
Simpson	0186, 0187
Sole	0813
Sony	0000, 0011, 0080, 0111, 0273, 0353, 0810, 0834, 1100, 1317
Soundesign	0178, 0179, 0180, 0186
Sova	1320, 1952
Spectricon	0003, 0137
Squareview	0171
SSS	0019, 0180

Starlite	0180
Studio Experience	0843
Superscan	0093, 0864
Supre-Macy	0046
Supreme	0000
SVA	0587, 0748, 0768, 0865, 0870, 0871, 0872
Sylvania	0020, 0028, 0030, 0054, 0065, 0096, 0171, 0381, 1944, 1963
Symphonic	0171, 0180
Syntax	1144, 1240, 1331
Tandy	0093
Tatung	0003, 0049, 0055, 0396, 1101, 1285, 1286, 1287, 1288, 1361, 1756
Technics	0051, 0250
Technol Ace	0179
Technovox	0007
Techview	0847
Techwood	0003, 0051, 0056
Teknika	0016, 0019, 0039, 0054, 0056, 0060, 0092, 0150, 0175, 0179, 0180, 0186, 0312, 0322
Telefunken	0056, 0074, 0702
Tera	0031
Thomson	0209, 0210
TMK	0056, 0177, 0178
TNCi	0017
Toshiba	0036, 0060, 0149, 0154, 0156, 0650, 0832, 0845, 1156, 1256, 1265, 1325, 1343, 1356, 1360, 1656, 1704, 1935, 1945, 1971
Tosonic	0185
Totevision	0039
Trical	0157
TVS	0463
Ultra	0391
Universal	0027
Universum	1337
US Logic	1286, 1303
Vector Research	0030
Victor	0053
Video Concepts	0098

Vidikron	0054, 0242
Vidtech	0019, 0036, 0178
Viewsonic	0857, 0864, 0885, 1330, 1342, 1755
Viking	0046, 0312
Visart	1336
Vizio	0864, 0885, 1756
Wards	0016, 0019, 0020, 0021, 0027, 0028, 0029, 0030, 0054, 0056, 0080, 0096, 0111, 0165, 0174, 0178, 0179, 0202, 0866, 1156
Waycon	0156
Westinghouse	0000, 0451, 0885, 0889, 1282
White	0463, 0623
Westinghouse	
Yamaha	0019, 0030, 0769, 0833, 0839
Zenith	0016, 0017, 0092, 0178, 0463, 1145, 1265
Zonda	0003