





























Record a program






- ω Push the  button to access the TV Guide menu.
- ω Move through the TV Guide by pushing     buttons on remote.
- ω When the program that you want to record is highlighted in yellow, press the  button.
- ω A red dot  will appear beside the name of the program.
- ω Press the  button.

Record a TV Series












- ω Push the  button to access the TV Guide menu.
- ω Move through the TV Guide by pushing     buttons on remote.
- ω When the program that you want to record is highlighted in yellow, press the  button.
- ω Using the  button select the  (set/cancel a recording) icon and press the  button.
- ω Using the  button move down to select the  (set a series recording) icon and press .
- ω Using the   buttons select between the following options:

Only New episodes
New and repeats
All with duplicates.









- ω Using the  button move down to highlight 'All Episodes'. And then use the   buttons to select how many episodes you'd like to be recorded.
- ω Push the  button to highlight 'Save until' and use the   buttons to choose between 'Until space is needed' or 'until I delete'.













- ω Push the  button to highlight  'Record series with these settings' and push the  button to select.
- ω Push the  one more time to confirm.
- ω Push the  button to return to TV picture.

Modifying/Cancel Series Recordings

















- ω Push the  button to access the Quick Menu.
- ω Using the  button on remote, highlight the  icon and press the  button on remote.
- ω Use the  buttons to highlight the box 'Series Recordings' and press the  button.
- ω Use the  buttons on remote to select the Series you wish to modify/cancel and press  button.
- ω Use the  buttons to highlight the desired function and press  button on remote to select.
- ω When finished with adjusting settings press the  button to return to TV picture.

Schedule recording by Date/Time











- ω Push the  button to access the Quick Menu.
- ω Using the  button on remote, highlight the  icon and press the  button on remote.
- ω Use the  buttons to highlight the box 'Set a Recording' and press the  button.
- ω Use the  buttons to select the 'Start time' of the recording. Press the  button on remote to highlight the next section.

- ω Use the   buttons to select the 'End time' of the recording. Press the  button on remote to highlight the next section.
- ω Use the  button to select the 'Date' the recording is due on. Press the  button on remote to highlight the 'Confirm' box and press  on the remote.
- ω Use the   buttons to select the channel you wish to record and press the  button on remote to select.
- ω Press the  button on remote to 'Create this recording'. Press the  button on remote again to confirm the recording settings.
- ω Press the  button to return to the regular TV picture.






Extend Recording Time Guide

- ω Press  button on remote.
- ω Use     arrow keys to highlight the program you wish to record.
- ω Press Record  button on remote. (A red dot  will appear next to show you wish to record).
- ω Press  button a second time.
- ω Use  arrow button to highlight 'Modify Recording Settings for this Program'.
- ω Press  button.
- ω Press  arrow button twice to highlight 'Stop Recording'.
- ω Use  arrow button to add minutes to recording end time.
- ω Press  arrow button to highlight 'Record Program with these Settings'.
- ω Press  button.
- ω Press  button a second time to confirm changes.
- ω Press  button to exit the guide.











With recording already in progress:

- ω Press  button on remote.
- ω With current recording already highlighted yellow, press  button.
- ω Use  arrow button to highlight 'Modify Recording Settings for this Program'.
- ω Press  button.
- ω Press  arrow button twice to highlight 'Stop Recording'.
- ω Use  arrow button to add minutes to recording end time.
- ω Press  arrow button to highlight 'Record Program with these Settings'.
- ω Press  button.
- ω Press  button a second time to confirm changes.
- ω Press  button to exit the guide.











Play a recorded program

- ω Press the  button to view your list of recorded programs
- ω Move through the list of recorded programs using the   buttons.
- ω Press the  button and the program will begin.
- ω Press the  button to stop the program from playing. (This will not delete the program it will continue to be saved in memory for re-playing)

Cancel (stop) a program from recording

- ω Press the  button to access the TV Guide menu.
- ω Move through the TV Guide by pushing the     buttons on remote.
- ω When the program is highlighted in yellow, push the  button.
- ω Press the  button to the  symbol.
- ω Press the  button.
- ω Press the  button.

Erase a recorded program

- ω Press the  button to access the list of your recorded programs.
- ω Move through the LIST by pressing the   buttons.
- ω When the program is highlighted press the  button
- ω Use the   buttons to highlight the .
- ω Press the  button (a screen will appear with two options (1) delete recording (2) don't delete recording).
- ω Highlight "delete recording" and press the  button.
- ω Press the  button to return to TV picture.