

















To Delete a **Favorites** list:

- ω Press the  button.
- ω Then use the   buttons to highlight the  and press the  button.
- ω On the next menu list use the  arrow to highlight the 'Setup' line and press  on remote.
- ω On the next screen highlight the 'Favorites List Setup' line and then press .
- ω Use the   to scroll through the active Lists and press  button to select the desired list.
- ω Use  to select  and press .
- ω Press the  once more to confirm the deletion.
- ω Press the  button on remote to return to Live TV picture