i-Guide Color Schemes

ω   Make sure your TV and Set Top Box are turned 'ON'.

ω   Press the ▨ button on remote to bring up the Quick Menu display on TV screen.
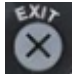
ω   Use the ◀ ▶ arrows keys to highlight the 🏠 'House' Icon, press OK/SEL button.

ω   Using the ▼ arrow key, scroll down to the 'Setup' line, press OK/SEL button.

ω   Using the ▶ and ▼ arrow key, scroll down to the 'Guide Color Setup' line, press OK/SEL button.

ω   Use the ◀ ▶ arrow keys to highlight the color scheme you prefer, press OK/SEL button.

ω   Once you are done making changes press the ⊗ button.